

Fast And Easy Installation Instructions



Front Bumper

Brand: Artic Cat

Model: 400 VP

Year: 2006

Product #: 166-106


Step 1 : Locate the front rack & front frame
of ATV.

Step 2 : Attach as shown in drawing.

It's that easy you're done

Note:

#	Item Description	Qty
1	Bumper	1
2	Brackets	2
3	2" x 5/16" Bolts	2
4	1 1/2" x 5/16" Bolts	2
5	3/4" x 5/16" Bolts	2
6	Lock Washer 5/16"	6
7	Washer 5/16"	6
8	Nut 5/16"	6
9	Plastic Cap	2

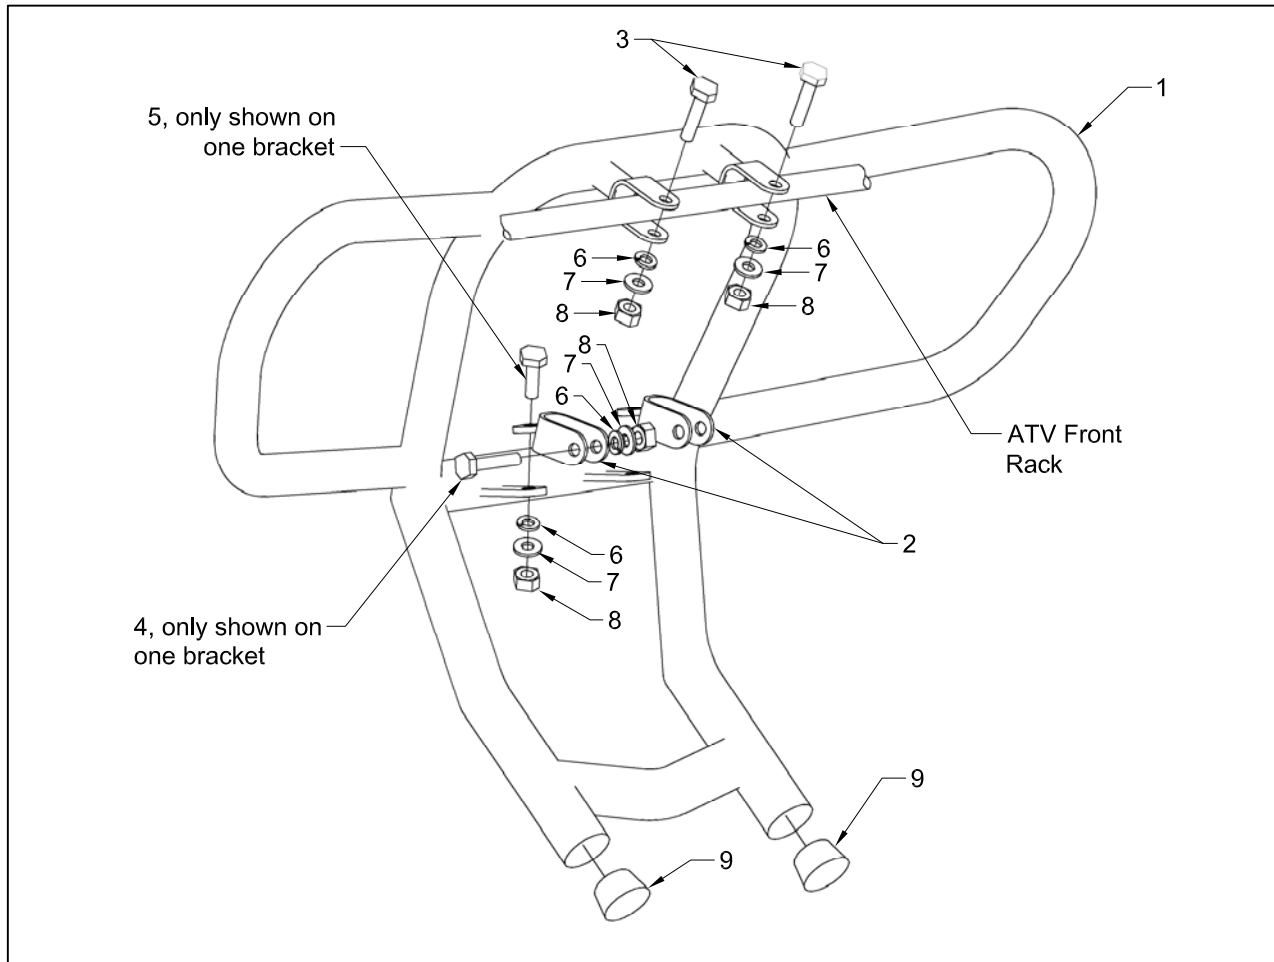

ATVenture Components Inc

23 Boom Lane, Unit E
Atholville, NB, Canada, E3N 4E8
www.atv-bumpers.com



F-7.5. 1-02-00

Approval Date: 06/02/2009
Initial: TLG
Rev: 00