

Fast And Easy Installation Instructions



FENDER PROTECTOR

Brand: ARTIC CAT

Model: 400 VP/500/650/700

Year: 2005-2007

Product #: 166-405


Step 1 : Assemble all parts together as shown in drawing.

Step 2 : Use floor slots and bike rack to position foot rest and tighten all hardware.

It's that easy you're done

Note: Only right side shown, hardware is doubled in description list.

#	Item Description	Qty
1	PLASTIC CAP 1"	2
2	BOLT HEX. 1"x 5/16"	8
3	BOLT HEX. 3/4" x 5/16"	2
4	LOCK WASHER 5/16"	2
5	FLAT WASHER 5/16"	18
6	LOCK NUT 5/16"	8
7	U 1/4" x 1 3/4"	2
8	LOCK NUT 1/4"	4
9	LOCK WASHER 1/4"	4
10	FLAT WASHER 1/4"	8
11	CS M6-30	4

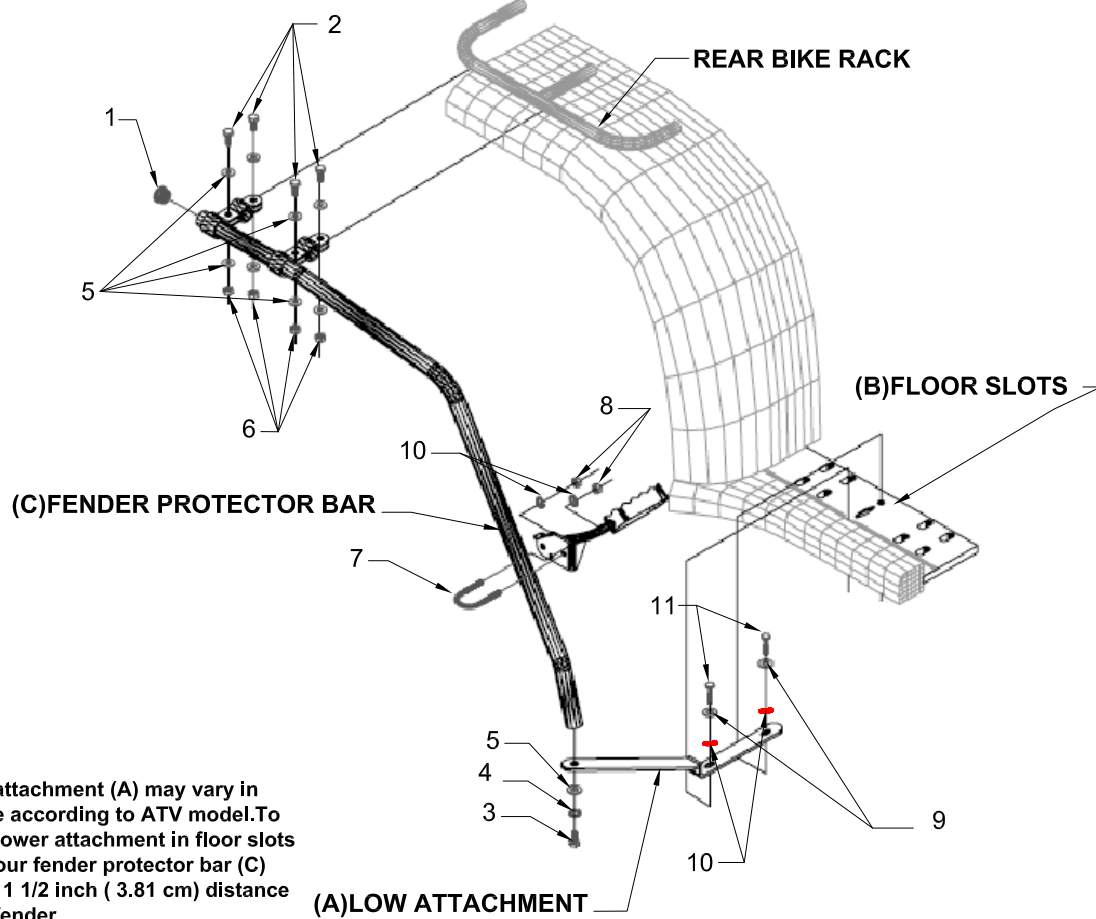

ATVventure Components Inc

23 Boom Lane, Unit E
Atholville, NB, Canada, E3N 4E8
www.atv-bumpers.com



Approval Date: 10-06-08
Initial: AT
Rev:00

F-7.5. 1-02-00