

# Fast And Easy Installation Instructions



## FENDER PROTECTOR

**Brand:** YAMAHA

**Model:** GRIZZLY YFM660

**Year:** 2002-2008

**Product #:** 166-440


#	Item Description	Qty
1	PLASTIC CAP 1"	2
2	BOLT HEX. 1" x 5/16"	8
3	BOLT HEX. 3/4" x 5/16"	2
4	CS-M6-30	4
5	FLAT WASHER 5/16"	18
6	LOCK WASHER 5/16"	2
7	LOCK NUT 5/16"	8
8	U BOLT 1/4" x 1 3/4"	2
9	LOCK NUT 1/4"	4
10	LOCK NUT M6	4
11	FLAT WASHER 1/4"	12

Step 1 : Assemble all parts together as shown in drawing.

Step 2 : Use floor slots and bike rack to position foot rest and tighten all hardware.

It's that easy you're done

Note: Only right side shown, hardware is doubled in description list.

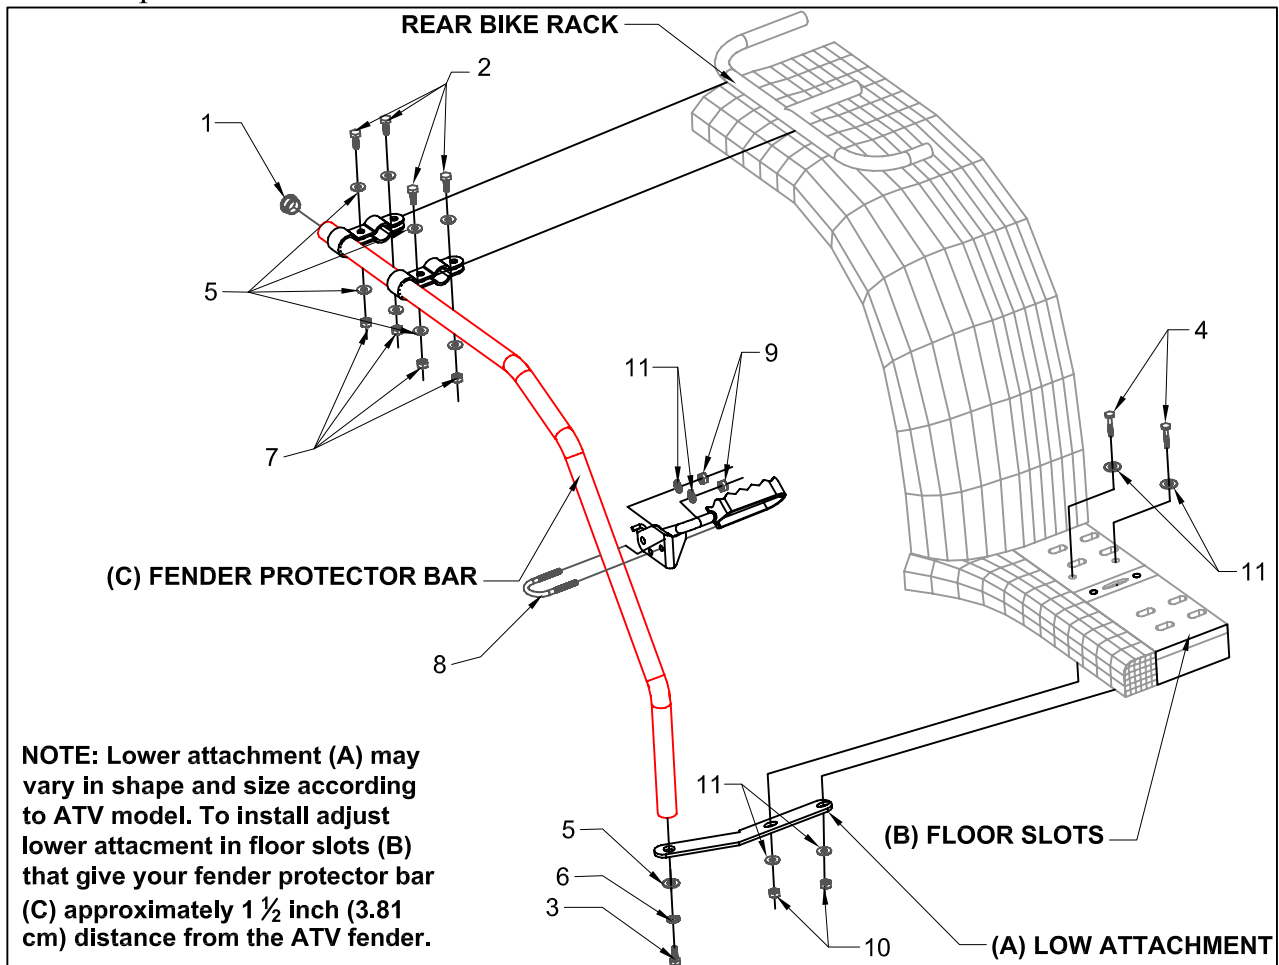

## ATVenture Components Inc

23 Boom Lane, Unit E  
Atholville, NB, Canada, E3N 4E8  
www.atv-bumpers.com

F-7.5. 1-02-00



Approval Date: 12-06-08  
Initial: AT  
Rev: 00